



Quick Start Guide for iOS Setup

Before you begin your SmartCam Setup, please:

- ✓ Have your SmartCam and power adapter ready.
- ✓ Have your iOS device available to download the SmartCam app.
- ✓ Make sure you are within range of the same Wi-Fi network you'll use for your camera.
- ✓ Record your Wi-Fi network password here: _____

For more information about the user manual, the mobile app manual or the FAQ, please visit www.samsungsmartcam.com.
If you have questions or need any help related to the installation of the SmartCam, refer to the help list in the mobile app information menu or contact our technical support team.

Product Views For Setup

Use the following diagrams to familiarize yourself with the camera setup features:



- 1) Power/Wi-Fi Status LED
- 2) Speaker
- 3) Power Input
- 4) Micro SD card slot
- 5) Serial Number (S/N:)
- 6) Wi-Fi Direct Button
- 7) Reset Button

 
For a more detailed diagram, please refer to the User's Manual.

The initial camera registration can only be performed using the mobile app.
You can also access all functions at www.samsungsmartcam.com, including camera settings, live monitoring and playing back recorded videos.

Create User Account

Please follow these easy steps to create a user account, before setting up your camera.

1. Go to the App Store from your iPhone or iPad.
2. Search for "Samsung SmartCam" and install the app.
3. Open the app.
4. Tap "Create new account".

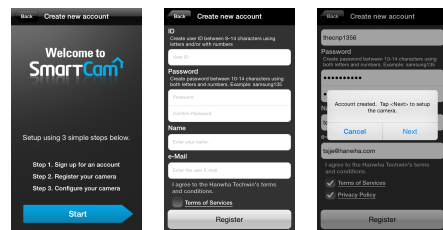

5. Tap "Start".
6. Enter user ID, password, name and e-mail. Tap "Register".
7. Tap "Next" to register your camera.

Record Your SmartCam User Account Information Here:

USER ID: _____
A combination of 8-14 alphanumeric letters
Example: johnsmith or johnsmith12

USER PASSWORD: _____
A combination of 10-14 alphanumeric letters
Example: smartcam123

iOS Wireless Camera Setup

Continue with camera setup by following the app wizard instructions.

 
1. Tap "Wireless Setup".
2. Connect the power and follow the on-screen instructions to set up Wi-Fi connection. When done, click "Next".
3. Exit SmartCam app by pressing the home button.
4. Go to the "Settings" on your iPhone/iPad, and tap "Wi-Fi".
5. Turn on your Wi-Fi, and pick the network ending in the last 4 characters of your camera's serial number. If a password is required, enter "smartcam". Once connected, exit "Settings" and return to the SmartCam app.
6. In the SmartCam app, select your home Wi-Fi network.
7. Enter your home Wi-Fi network password and tap "Connect".
8. When the LED light turns green on the camera, you will automatically be directed to Step 9.
9. Create a name and password for your camera. (Name: 1-20 letters and numbers. Password: 1-8 letters and numbers)
10. To setup your Wi-Fi, select "Yes".
11. Select your Time Zone and then tap "Next".
12. Enable motion and/or audio detection to receive event alerts on your devices.

CONGRATULATIONS!
You have successfully completed the SmartCam setup!
Camera Setup Information:

CAMERA NAME: _____
1-20 alphabetic letters and/or numbers
Example: kitchen or kitchen123 or 123

CAMERA PASSWORD: _____
1-8 alphabetic letters and/or numbers
Example: room or room123 or 123

SmartCam Control Guide

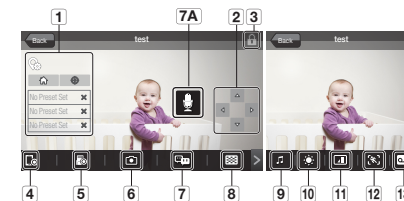

1. PT Control	Tap to save the direction in which you want to move the camera. Tap to move to the home position. Tap to auto track an object. An event will be generated when a movement is detected. Tap to move to a set position.
2. Change Direction	Tap the direction button to turn the camera in the corresponding direction.
3. Privacy Mode Setup	Tap the icon to enable/disable privacy mode.
4. Phone recording	The user can save the video in <Manage saved video clips> in Settings
5. SD Save	Tap to save streaming video onto the SD card.
6. Capture	Tap to capture and save a still image during monitoring
7. Two-Way Talk	Tap to begin and end Two-Way Talk between mobile device and camera
7A. Microphone Button	To talk, press and hold the mic button on the screen, release to listen
8. Selecting a resolution	It displays the video resolution that is currently connected. Please tap to change the current resolution.
9. Melody	Tap to view and choose melody selection to play through camera
10. Brightness Control	Tap to adjust screen image brightness
11. Flip Control	Tap to flip screen image vertically or horizontally
12. Motion Zone Select	Tap to detect a motion in a specific area (up to 3 areas). If the motion detection function is activated, any motion can be detected, without even setting the motion zone.
13. Voice Recording	You can output any voice message recorded via the camera speaker (up to 10 messages).



English



Quick Start Guide for Android Setup

Before you begin your SmartCam Setup, please:

- ✓ Have your SmartCam and power adapter ready.
- ✓ Have your Android device available to download the SmartCam app.
- ✓ Make sure you are within range of the same Wi-Fi network you'll use for your camera.
- ✓ Record your Wi-Fi network password here: _____

For more information about the user manual, the mobile app manual or the FAQ, please visit www.samsungsmartcam.com.

If you have questions or need any help related to the installation of the SmartCam, refer to the help list in the mobile app information menu or contact our technical support team.

Product Views For Setup

Use the following diagrams to familiarize yourself with the camera setup features:



 
- 1) Power/Wi-Fi Status LED
- 2) Speaker
- 3) Power Input
- 4) Micro SD card slot
- 5) Serial Number (S/N)
- 6) Wi-Fi Direct Button
- 7) Reset Button

For a more detailed diagram, please refer to the User's Manual.


The initial camera registration can only be performed using the mobile app. You can also access all functions at www.samsungsmartcam.com, including camera settings, live monitoring and playing back recorded videos.

Create User Account

Please follow these easy steps to create a user account, before setting up your camera.

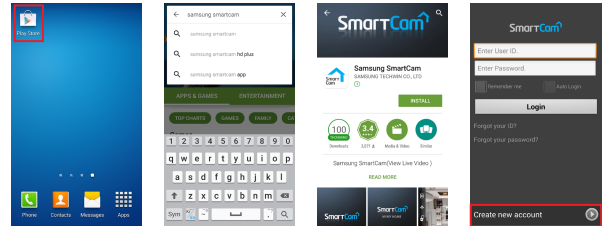

 1. Go to the Play Store from your Android device.
2. Search for "Samsung SmartCam" and install the app.
3. Open the app.
4. Tap "Create new account".

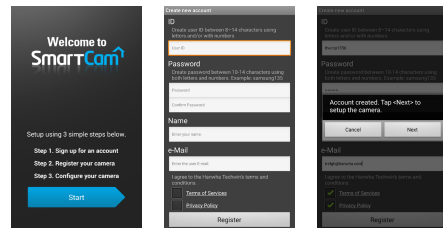

5. Tap "Start".
6. Enter user ID, password, name and e-mail. Tap "Register".
7. Tap "Next" to register your camera.


Record Your SmartCam User Account Information Here:

USER ID: _____
A combination of 8-14 alphanumeric letters
Example: johnsmith or johnsmith12

USER PASSWORD: _____
A combination of 10-14 alphanumeric letters
Example: smartcam123

Android Wireless Camera Setup

 Continue with camera setup by following the app wizard instructions.

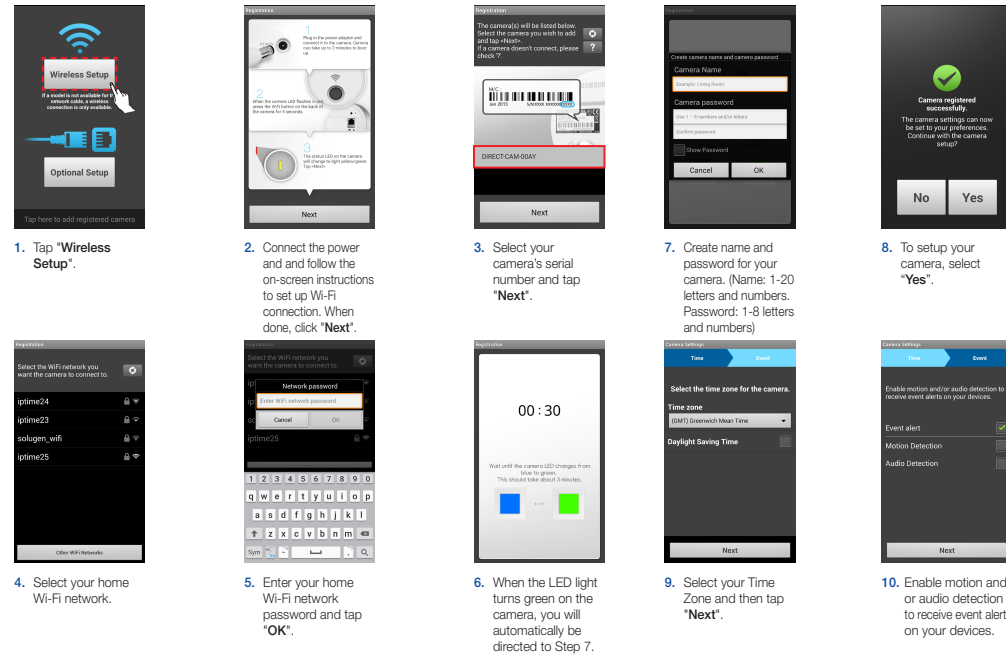

1. Tap "Wireless Setup".
2. Connect the power and follow the on-screen instructions to set up Wi-Fi connection. When done, click "Next".
3. Select your camera's serial number and tap "Next".
4. Tap "Next" to register your camera.
5. Enter your home Wi-Fi network password and tap "OK".
6. When the LED light turns green on the camera, you will automatically be directed to Step 7.
7. Create name and password for your camera. (Name: 1-20 letters and numbers. Password: 1-8 letters and numbers)
8. To setup your camera, select "Yes".
9. Select your Time Zone and then tap "Next".
10. Enable motion and/or audio detection to receive event alerts on your devices.

 
CONGRATULATIONS!

You have successfully completed the SmartCam setup!
Camera Setup Information:

CAMERA NAME: _____
1-20 alphabetic letters and/or numbers
Example: kitchen or kitchen123 or 123

CAMERA PASSWORD: _____
1-8 alphabetic letters and/or numbers
Example: room or room123 or 123

SmartCam Control Guide

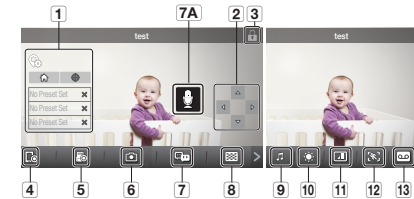

	Tap to save the direction in which you want to move the camera.
	Tap to move to the home position.
	Tap to auto track an object. An event will be generated when a movement is detected.
	Tap to move to a set position.
	Tap the direction button to turn the camera in the corresponding direction.
	Tap the icon to enable/disable privacy mode.
	The user can save the video in <Manage saved video clips> in Settings
	Tap to save streaming video onto the SD card.
	Tap to capture and save a still image during monitoring
	Tap to begin and end Two-Way Talk between mobile device and camera
	To talk, press and hold the mic button on the screen, release to listen
	It displays the video resolution that is currently connected. Please tap to change the current resolution.
	Tap to view and choose melody selection to play through camera
	Tap to adjust screen image brightness
	Tap to flip screen image vertically or horizontally
	Tap to detect a motion in a specific area (up to 3 areas). If the motion detection function is activated, any motion can be detected, without even setting the motion zone.
	You can output any voice message recorded via the camera speaker (up to 10 messages).