


Energy Monitor Operation Manual

Model No's: JSJS LW600

It is important to install this product in accordance with the fitting instructions below. Failure to do so may render your guarantee void.

IMPORTANT: PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE AND FOR GUIDANCE ON THE ASSOCIATION OF REMOTE HANDSETS. FOR HELP AND SETUP GUIDANCE PLEASE VISIT www.lightwaverf.com

OVERVIEW:

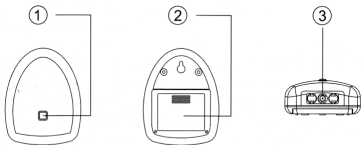

KEY

1. LED to indicate the data transmission
2. Battery compartment
3. Sensor cable sockets (3pcs)

This device enables you to view your current electricity usage using a smartphone, iPod Touch/ iPhone/iPad or a PC webpage (not included). This product must be used in conjunction with a LightwaveRF Connect Wifi-Link and wireless router (not included).

 
INSTALLATION:

WARNING!

Extreme care must be taken when working with electrical equipment as touching exposed electrical wires may result in electrocution. If you are in any doubt, please consult a qualified electrician.

Attaching the transmitter

1. Locate Electricity Meter and identify live supply cable.
2. Visually inspect the insulation (plastic covering) to ensure no damage or deterioration such as cracks in the outer covering, visible copper cores etc.
3. Firmly attach the sensor around the cable using the self-locking cable clamp.



4. Insert the 2 X AA batteries into the transmitter.
5. Attach the transmitter to the wall using the wall mount kit provided, ensuring that the length of the sensor cable will reach the location of the transmitter.

SETUP:

The Energy monitor is designed to work in conjunction with the LightwaveRF Connect Wifi Link. Please refer to the Wifi-Link setup instructions for guidance on how to install and setup the app or web console.

PAIRING THE ENERGY MONITOR

Once you have set up the Wifi-Link and installed the Energy Monitor, you will need to pair the two together.

1. Ensure that you are in RF range of the device when setting up (generally within the home is acceptable range).
2. On the Wifi-Link Menu screen scroll across until 'Energy Monitor sync' is displayed. Press and hold down the button next to the word 'sync'.
3. Whilst holding the 'sync' button on the Wifi-Link hold down the green LED button on the Energy Monitor until it flashes. The monitor is now paired with the Wifi-Link.

OPERATION:

Once you have paired the Energy Monitor and Wifi-Link, after around 30 seconds the monitor will start to send data to Wifi-Link which will be displayed on the LCD screen.

The energy data can also be displayed on the LightwaveRF app or PC web console. As long as your device is registered with the Wifi-Link, you should automatically be able to see the live data by migrating to the 'Ecometer' tab (there may be a short delay when you first view the page).

You can adjust the electricity tariff cost calculations by choosing 'Comm Settings' and then 'Eco Meter' on the settings tab of the app. For guidance on how to do this using the web console please follow the online instructions.

Battery Replacement

Requires 2 AA batteries (not included). **When battery voltage is low, the transmission range may become poor and meter readings may be unreliable.** Slide down the battery cover and replace with a fresh new battery.

SPECIFICATION:

RF frequency: 868 Mhz

Range: >30m

Power supply: 3V (2 x AA batteries)

Blue LED indicator

Operating Environment:

Operating temp: 0°C-50°C

Storage temp: 0°C-70°C



Birmingham Science Park Aston
Faraday Wharf
Holt Street
Birmingham
B7 4BB

Tel: 01902 500 562
Email: support@jsjsdesigns.com