



Start here

LW904 Magnetic Switch



Go online

Because we are always making updates and improvements to LightwaveRF products, we need to ensure that you have the most up to date instruction guide. Please visit the link below to view the current manual.

www.lightwaverf.com/product-manuals



Quick reference instructions

Please refer to the complete online instruction guide BEFORE attempting installation. The information on the following pages provides a useful reference when setting up the product. LightwaveRF is fully legal to install in your own home; however, if in doubt, always consult a qualified electrician.




Installation

Attach one section of the Magnetic Switch to the door/window and one section to the frame as shown in the diagrams. The two sections must be installed so that the three dots on each part meet when the door/window is closed. The Magnet and Electronic unit should not be any more than 10mm apart (Drawing A and B).


The magnet and electronic unit can be fastened in one of two ways:

ADHESIVE STRIP: stick the strips on the rear sides of the brackets, and press the brackets onto the frame and window. This does not damage the door or window in any way as long as the adhesive strips supplied are used.

SCREWS: Use the countersunk head screws supplied to fasten the electronic unit. If you are working with a hard surface, you should drill the holes using a 1.5mm drill.

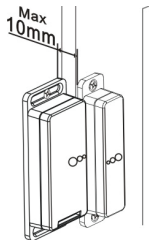

Drawing A

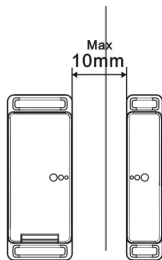

Drawing B

Linking to a device

1. Place the LightwaveRF device that you wish to control in 'linking' mode. For information on how to do this please refer to the instruction manual for that specific LightwaveRF device.



2. Whilst the device is in linking mode, separate the Magnetic Switch (open the window or door). The indicator light on the target device will flash to confirm that the switch is now linked. This process can be repeated to control multiple LightwaveRF devices from one switch.



Unlinking

1. Place the LightwaveRF device that you wish to remove in 'linking mode'. For information on how to do this, please refer to the instruction manual for that specific LightwaveRF device.

2. Whilst the LightwaveRF device is in linking mode, separate the Magnetic Switch (open the window or door). The LED light on the target device will flash to confirm that the switch and device are unlinked.



Lightwave^{RF}

Innovation Campus Birmingham
Faraday Wharf
Holt Street
Birmingham
B7 4BB

