



# Z-Wave Module Manual.

An ASSA ABLOY Group brand

ASSA ABLOY

The smarter way to protect your home.

# Contents

---

Network Inclusion	4
Network Exclusion	5

## **Conexis® L1**

Inserting the module	6
Add Mode	8
Remove Mode	9
Local Reset	10

## **Keyless Connected**

Inserting the Module	11
Add Mode	13
Remove Mode	14
Reset locally	15

## **Keyfree Connected**

Inserting the Module	17
Add Mode	18
Remove Mode	19
Reset locally	20
Help & Support	21

## Network Inclusion

---

This product can be added to operate in any compatible Z-Wave network. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

For details on adding your smart lock to the network, please go to the following pages:

Conexis L1: 8

Keyless Connected: 13

Keyfree Connected: 18

## Network Exclusion

---

Your lock must be removed from any existing Z-Wave network before being added into a new Z-Wave network. This can be done either through the 'remove mode' or by a 'local reset'.

For details on removing your smart lock from the network, please go to the following pages:

Conexis L1: 9


Keyless Connected: 14

Keyfree Connected: 19


# Conexis® L1

## Installing the module


---

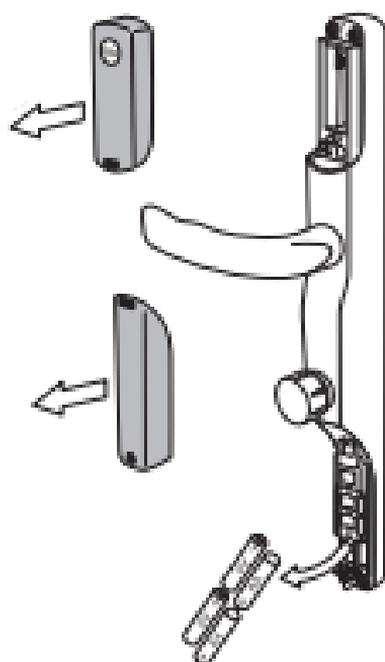

### 1. Remove the batteries

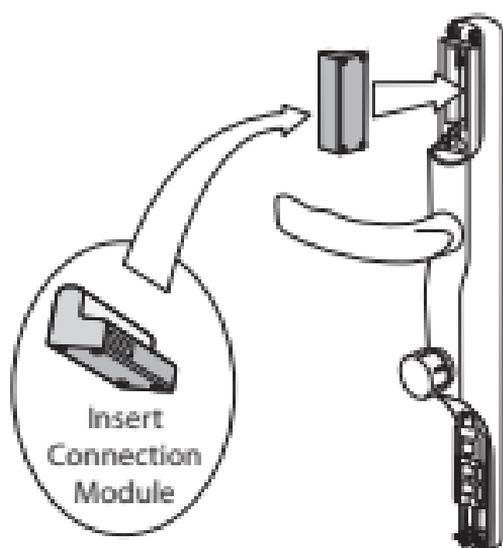

### 2. Insert the radio module

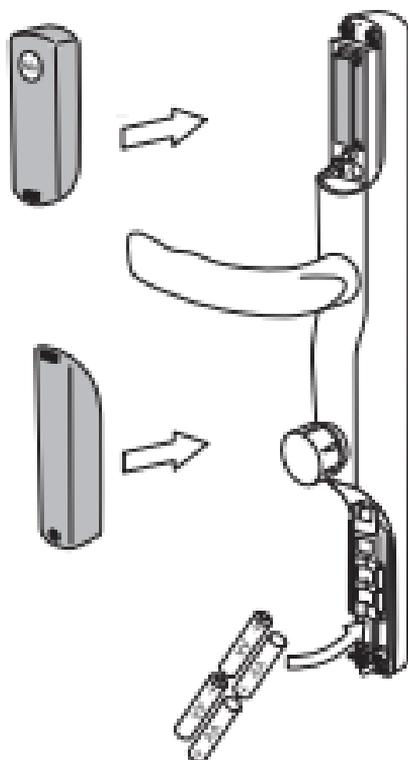

**3.** Re-insert the batteries

## Add Mode

---

1. Put the Z-Wave controller into add or learn mode
2. Press the R button on the lock 3 times quickly (within 1.5 seconds)
3. Refer to the operation manual of the Z-Wave controller to complete the learn in process.

For more information on this please visit:

**[www.yale.co.uk/help](http://www.yale.co.uk/help)**

## Remove Mode

---

1. Put the existing Z-Wave controller into Remove Mode
2. Press the R button on the lock 3 times quickly (within 1.5 secs)

The lock is now ready to be added to a new Z-Wave controller

For more information on this please visit:



**[www.yale.co.uk/help](http://www.yale.co.uk/help)**

## Local Reset

---

*Only use this when the existing Z-Wave controller is missing or inoperable.*

Press "R" Button 3 times with handle up

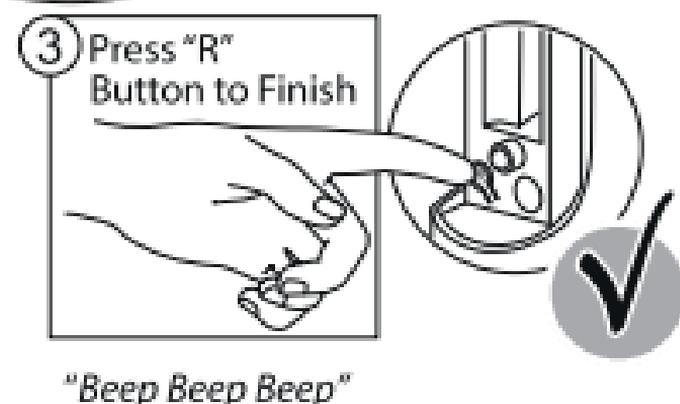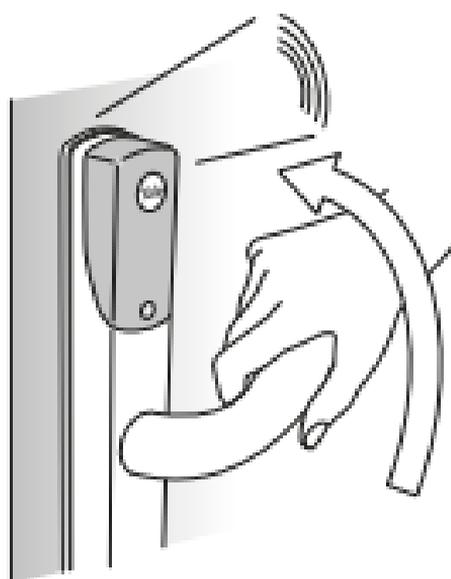


# Keyless Connected

## Installing the module

---



**1.** Remove the batteries

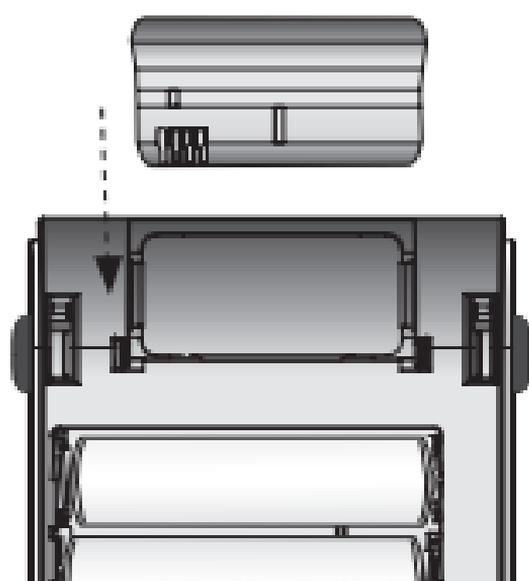

**2.** Insert the module



**3.** Re-insert batteries

## **Add Mode**

---

- 1.** Put the Z-Wave controller into add or learn mode
- 2.** Enter the Master code on the lock, followed by #
- 3.** Press the 4 button, followed by #
- 4.** Press the 1 button followed by #
- 5.** Refer to the operation manual of the Z-Wave controller to complete the learn in process

For more information on this please visit: [\*\*www.yale.co.uk/help\*\*](http://www.yale.co.uk/help)

## Remove Mode

---

1. Put the Z-Wave controller into remove mode
2. Enter the Master code on the lock, followed by #
3. Press the 4 button, followed by #
4. Press the 3 button followed by #
5. Refer to the operation manual of the Z-Wave controller to complete the remove process

For more information on this please visit:

[www.yale.co.uk/help](http://www.yale.co.uk/help)

## Reset locally

---

*Only use this when the existing Z-Wave controller is missing or inoperable.*

- 1.** Enter the Master code on the lock, followed by #
- 2.** Press the 4 button, followed by #
- 3.** Press the 0 button followed by #


For more information on this please visit:

**[www.yale.co.uk/help](http://www.yale.co.uk/help)**


## Keyfree Connected

### Inserting the module


---

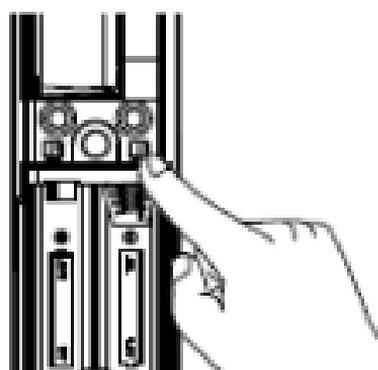

1. Remove the batteries

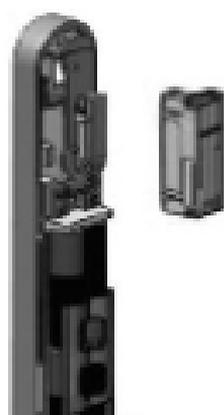

2. Insert the module

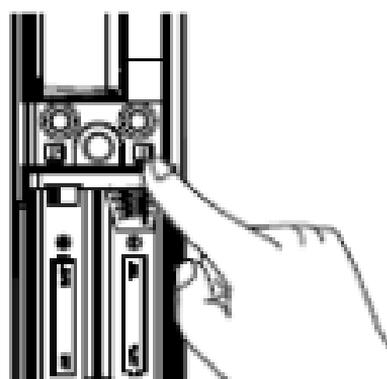

3. Re-Insert batteries

## **Add Mode**

---

- 1.** Put the Z-Wave controller into add or learn mode
- 2.** Enter the Master code on the lock, followed by #.
- 3.** Press the 4 button, followed by #
- 4.** Press the 1 button followed by #
- 5.** Refer to the operation manual of the Z-Wave controller to complete the learn in process.

For more information on this please visit:

[\*\*www.yale.co.uk/help\*\*](http://www.yale.co.uk/help)

## Remove Mode

---

- 1.** Put the Z-Wave controller into Remove mode
- 2.** Enter the Master code on the lock, followed by #
- 3.** Press the 4 button, followed by #
- 4.** Press the 2 button followed by #
- 5.** Refer to the operation manual of the Z-Wave controller to complete the remove process.

For more information on this please visit:

[www.yale.co.uk/help](http://www.yale.co.uk/help)

## Reset locally

---

*Only use this when the existing Z-Wave controller is missing or inoperable.*

- 1.** Enter the Master code on the lock, followed by #
- 2.** Press the 4 button, followed by #
- 3.** Press the 0 button followed by #

For more information on this please visit:

**[www.yale.co.uk/help](http://www.yale.co.uk/help)**



## Help & Support

---

For Help & Support please visit  
**[www.yale.co.uk/help](http://www.yale.co.uk/help)**

Hereby, ASSA ABLOY Ltd, School Street, W13 3PW declares that the Z-Wave Module 2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.yale.co.uk/declaration-of-conformity](http://www.yale.co.uk/declaration-of-conformity)

**Issue No.1A**