




Yae Easy Fit EF-Series Alarm System

Wirefree 868MHz Yale EF-PETPIR (EF-3PETPIR) Pet Friendly PIR

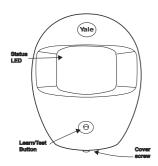

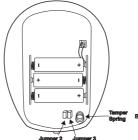

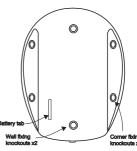

Description:

• Learn/Test Button

To enter Test mode: Press once in Standby mode. The LED will light up for two seconds whenever a movement is detected. Test mode lasts for 3 minutes.

- LED Indicator
- Knockouts for Wall / Corner Mounting
- Jumper 2= Supervision Enable / Disable
- Jumper 3= Movement High/Low Sensitivity
- Tamper Switch with spring
- 3x 1.5V AAA Alkaline Battery
- Top & Bottom Cover securing screw hole

Pack contents

- 1 x PIR motion detector.
- 4 x wall plugs & screws.
- 3 x 1.5V AAA alkaline cells (pre-fitted).

Supervision Enable/Disable Jumper 2

If enabled, the PIR will automatically transmit Supervisory signals periodically to the Control Panel at random intervals. The Control Panel needs to enable supervision before it can monitor these periodic signals.

Jumper On= Supervision Disabled (Default)

Jumper Off= Supervision Enabled

Movement High/Low Sensitivity Jumper 3

Jumper On= Increase PIR sensitivity to movement

Jumper Off= Decrease sensitivity (Factory Default)

Programming & installation


Program your PIR before installation and test afterwards. Please see your current system instruction book.

Notes on pet immunity

- Suitable for use with a single pet weighting less than 27Kg. It is not suitable for use in rooms where the pet can climb onto furniture. Pet standing on furniture will appear taller and larger to the PIR hence triggering a false alarm. If the Pet PIR is false triggering, please use DC to secure the area instead.
- When mounted at 1.9M height, the typical detection range is 12M and gives a pet immune range of 7M.
- As the PIR is placed higher from the ground, the pet immune range will increases; Placing the PIR closer to the ground will reduce the pet immune range.
- For taller pet, you maybe required to

place the PIR higher up as a result. Please adjust according to the environment and test thoroughly before commissioning.

• Please note the blind spot under the PIR increases with mounting height (see diagram).

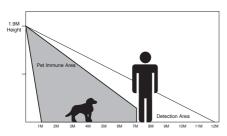

Operation

Sleep Timer

The PIR features an automatic "sleep time" of approximately one minute for power conservation. After transmitting a detected movement, the PIR will not retransmit for one minute. Any further movement detected within this one-minute sleep period will extend the sleep time by another minute. Disable the sleep timer temporarily by entering the test mode. See Test Mode section.

LED indicator	
Off	Normal operation
LED flash (2 sec)	- Detects motion during Low battery, -Tamper activated or Test modeSpring tamper switch is activated.

Specification

Environmental conditions:

-10c to 40c, relative humidity 85% noncondensing. Indoor use only

Radio: 868MHz FM





Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.





RoHS

Note: Waste electrical products and batteries should not be disposed of with household waste.

2 Year Instruction Statement:

This product is guaranteed for consumers against faulty workmanship, materials and function for a period of 2 years from the date of purchase providing the full installation and maintenance instructions are followed. Please keep your proof of purchase safe, this must be submitted when making a claim under this quarantee.

Please note that it is a condition of this guarantee that your Yale product:

- Has been correctly installed and maintained in accordance with the Yale installation and maintenance instructions provided to you at the time of purchase.
- Has not been modified or damaged in any way.
- · Has not been subjected to unauthorized repairs.

Yale are responsible under this guarantee for repairing the product or replacing the product as we deem necessary. If there is fault with the product, please contact Customer Services on 01902 364647, who will give you the name of an expert and confirm what you need to do to make a claim under this quarantee.

Please do not carry out any repairs without our authority or by using an unauthorised expert. Any repairs or other works carried out without our authorization or by using an unauthorized expert will not be covered under this guarantee.

This guarantee is non transferrable and applies to products purchased in the United Kingdom only. This guarantee does not apply to normal wear and tear. This does not affect your statutory rights. A full copy of the product instructions are available upon request or by visiting our website www.yale.co.uk.

